

## 11x Excite Configuration Information for the Medrad 1.5 T ATD TORSO

**Please note:** The Medrad configuration files are **pre-loaded** in this software platform. The files are located in the Available Coil List in the Configuration File Manager. The files should be added to the Site Coil List, Saved and followed by a system re-boot.

For assistance with configuration files, please contact your Field Service Engineer or call 1-800-MRCOILS (672-6457)

### ATD Torso Device file name: *ATDTORSO*

Please consult the ATD Torso bulletin board located on the Medrad Web page to ensure your device is set up for the Torso Array coil in use.

For any technical question, please call 1-800-MRCOILS (672-6457).

---

For PROSE: You will need the **ENDOATD** file. This file is also located in the Available Coil list.

For assistance with the Prose sequence, please contact your GE FSE or GE Applications Specialist.

