

Configuration File Data – 1.5 T T/R Phased Array Extremity Coil- 1.5T

Please be aware that some of the terminology may be different depending on software level. Call 1800 MRCOILS with any questions.

Coil Name	LGEXTPA	SMEXTPA	LOEXTPA
Coil Type	1	1	1
Extremity Coil	no	no	no
Cable Loss	Same as the Head coil cable loss	Same as the Head coil cable loss	Same as the Head coil cable loss
CoilLoss	Same as the Head Coil coil loss	Same as the Head Coil coil loss	Same as the Head Coil coil loss
Recon Scale Factor	For 8.2 and lower, use the GE Head Coil Recon scale factor. For 8.2.5 and above, use 1.0	For 8.2 and lower, use the GE Head Coil Recon scale factor. For 8.2.5 and above, use 1.0	For 8.2 and lower, use the GE Head Coil Recon scale factor. For 8.2.5 and above, use 1.0
Linear vs. Quad	1	1	1
Multiple Receiver Coil?	yes	yes	yes
Number of receivers	4	4	1
Starting Receiver ID	0	0	0
Ending Receiver ID	3	3	0
Multi-Coil Port Enable	15	15	15
Multi-coil Error Enable	15	15	15
Additional Transmit Attenuation	50 (5.0 dB)	100 (10.0 dB)	80 (8.0 dB)
Number of Fast Receivers	0	0	0
Starting Fast Receiver ID	4	4	4
Ending Fast Receiver ID	4	4	4
Fast TG Start TA	90	90	90
Fast TG Start RG	11 (LX 8X) 5 (5X) Systems	11 (LX 8X) 5 (5X) Systems	11 (LX 8X) 5 (5X) Systems
Multi coil Recon Enable	0	0	14
Head Default Freq Dir	1	1	1